

**CHALLENGE US !**  
You liked it so much that we are doing it again



Planetary Mixer

**8%** discount for the purchase of a bundle

+ 1 free 3cc or 5cc syringe adapter

Precifluid easy



OR



Precifluid dispenser

Offer valid until the 30th of September 2021

You are only 10 steps away from a perfect dispensing.

01




Use the planetary mixer P-Mix 100 to mix and degas.

02



You will be able to homogeneously mix all engineering compounds from one to two-components.

03

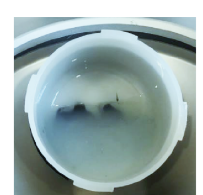

Before using the P.Mix 100, the product is not homogeneous.

04



Insert the mixing cup in the planetary mixer.

05




The material in the container revolves and rotates in a planetary manner at high speed.

06




You have now a consistent and without air bubble mixing result.

07

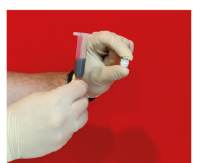

You can then fill a syringe with the perfectly mixed product.

08

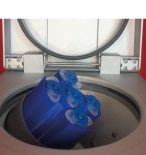


Place the syringe in the syringe adapter, inside the planetary mixer and rotate it again, to remove any air bubbles that may have been added during the transfer.

09




You can now insert the piston inside the syringe without adding air.

10

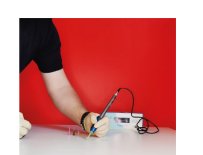

You are now ready to dispense.

Contact us

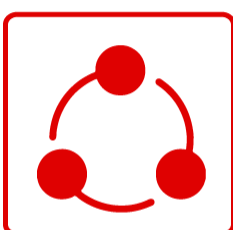


Mix



Dispenser



Robots

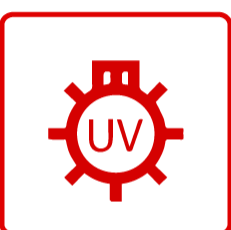

Polymerization

sales@dosis-uk.com

Tel : + 44(0) 1527 889299 / Fax : + 44(0) 7398 600578  
1 Buntsford Park Road, Bromsgrove, Worcestershire B60 3DX



Website



LinkedIn



YouTube

Dosis UK is a company of the RG distribution group

RG distribution

POLY DISPENSING SYSTEMS

CDV solutions

RECTIFICATION HAUTE PRECISION RHP

EL Electronics

Verfilcos

DOSIS UK

AdheTech.